

XLR2UTP4 Installation

XLR2UTP4 connects your external wireless microphone receiver with XLR output such as Sennheiser, AKG, Audiotechnica, Shure, ... into Yealink MS Teams and Zoom Room devices.



Installation

- XLR F audio input - to the output of your wireless mic receiver
- RJ45 PoE input - to your existing Yealink PoE switch
- RJ45 cascading - optionally to another XLR2UTP unit or VCM34 microphone

Use only with VCM34 microphones (or with no other mics).

See our similar products for installations with other Yealink microphones.

The number of XLR2UTP4 units per Yealink video room device follows the same rules as for VCM34 mics.

Speech from wireless microphone is transmitted to the remote side, it is not played back locally.

You can rename your XLR2UTP4 (which is first recognized as VCM34) to e.g. "Wireless" and you can separate Mute control in the Yealink RoomConnect application.

Rename Mic

<https://support.yealink.com/en/portal/knowledge/show?id=6459d54c0a11b818a7542888>

Separate Mute control

<https://support.yealink.com/en/portal/knowledge/show?id=6459d54c0a11b818a7542883>